



# KINPlay SOUND B A R II



## OWNERS MANUAL

**KINBYTOTEM.COM**

# Congratulations

We sincerely thank you for having granted Totem's **KIN Play Soundbar II** the special place in your living environment. This Soundbar was designed to redefine your musical understanding and open corridors of new experiences. We hope that you not only enjoy but experience KIN as your guide to a new and rewarding listening environment! You will without a doubt attain a KIN moment.

## Our Vision

Created in 1987, Totem's mission is to develop loudspeakers capable of producing an involving performance that is true to the artist's intention. Totem Acoustic's KIN "sub brand" was introduced in 2014, born from a desire to engage a wider audience by offering affordable solutions for today's audio capable devices. Fast forward 10 years and KIN has evolved into a full-fledged loudspeaker series, featuring both powered Bluetooth and passive loudspeakers, a soundbar, subwoofers, and an integrated amplifier/DAC with both aptx™ HD Bluetooth and phono stage for certain models. Totem's DNA abounds throughout KIN, allowing for ease of placement while providing a lifelike sonic experience in any application, be it for music, movies or gaming, etc. Ultimately, Totem and KIN models can seamlessly integrate in virtually any setting.



 
# DISCOVER the KIN PLAY SOUNDBAR II

**Designed by Totem Acoustic in Montreal, Canada, the KIN Play Soundbar II was created to provide a simple yet remarkable audio solution. Integrated amplification relieves the need to be tethered to a separate amplifier. Bluetooth technology allows high resolution, wireless streaming from your favorite device. A wide selection of inputs allows the connection of all your other sources, from your gaming system, and everything in between.**

**Totem keeps to a strict quality control regimen and all factory-sealed products leave our facility in perfect condition. If there are any damages visible or concealed that has occurred in handling it must be reported immediately to your Authorized Totem Dealer. Carefully remove the speakers from the box and save all interior and exterior packaging for future use.**

**The KIN Play SoundBar II provides an exciting and explosive performance. It can be paired or connected directly to any of your sources. Say goodbye to the old school receiver or complicating wiring. Proprietary drivers ensure for a dynamic performance, phase linearity and enormous spatial presentation.**

# Important Safety Instructions

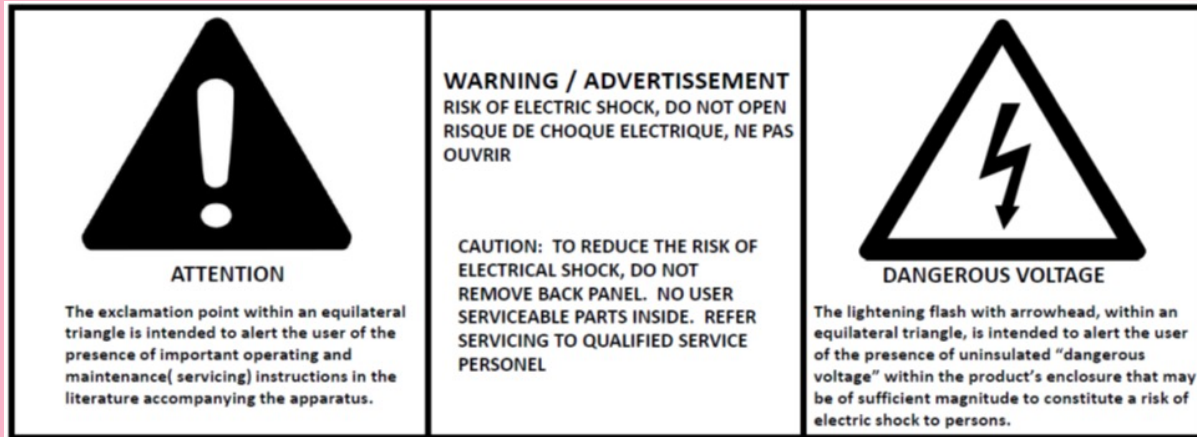

- 1. Read instructions**
- 2. Retain these instructions**
- 3. Heed all warnings**
- 4. Follow all instructions**
- 5. Do not use this apparatus near water.**
- 6. Clean only with a dry cloth.**
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.**
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11. Only use attachments/accessories specified b the manufacturer.**
- 12. Unplug this apparatus during lightning storms or when unused for long periods of time.**
- 13. The equipment shall be used at maximum 40 degree C ambient temperature.**
- 14. Do not open the equipment to reduce the risk of electrical shock. For safety reasons it is only allowed to be opened by qualified service personnel.**

# Important Safety Instructions

**15. WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. And the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**16.** The MAINS plug or appliance inlet is used as the disconnect device and shall remain readily operable.

**17.** The product shall be used on open bench.

**18.** No naked flame sources, such as lighted candles, should be placed on the apparatus.

**19.** The use of apparatus in tropical climates. -

**20.** Minimum 10cm distances around the apparatus for sufficient ventilation

**21.** The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.



**22. BATTERY WARNING:** Do not ingest the battery, Chemical burn hazard (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## IC WARNING

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## CAUTION

To prevent electrical shock do not use the electrical plug of your Totem Subwoofer with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent exposure. To protect against the risk of electrical shock do not use near bathtubs, sinks, swimming pools, saunas, in wet basements, near other water sources, or rain. If service is required, please refer to your Totem Authorized Dealer.

## **WARNING**

**DO NOT INGEST THE BATTERY, CHEMICAL BURN HAZARD**

**(THE REMOTE CONTROL SUPPLIED WITH) THIS PRODUCT CONTAINS A COIN/BUTTON CELL BATTERY. IF THE COIN/BUTTON CELL BATTERY IS SWALLOWED, IT CAN CAUSE SEVERE INTERNAL BURNS IN JUST 2 HOURS AND CAN LEAD TO DEATH.**

**KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN.**

**IF THE BATTERY COMPARTMENT DOES NOT CLOSE SECURELY, STOP USING THE PRODUCT AND KEEP IT AWAY FROM CHILDREN.**

**IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.**

## **CAUTION**

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

## **FCC WARNING**

This device complies with Part 15 of the **FCC RULES**.

Operation is subject to the following conditions:

- (1) This device may not cause harmful interference; and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE 1:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: **REORIENT OR RELOCATE** the receiving antenna. **INCREASE THE SEPARATION** between the equipment and receiver

**CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT** from that to which the receiver is connected. **CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.**

**NOTE 2:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



# Accessories Included

**WALL BRACKET**

**WALL MOUNT TEMPLATE**

**OPTICAL CABLE**

 
 
**REMOTE CONTROL**

**POWER CORD**

**MAGNETIC GRILL**

**4 RUBBER BUMPERS**

**6 SELF ADHESIVE FEET**

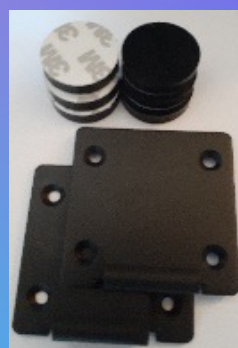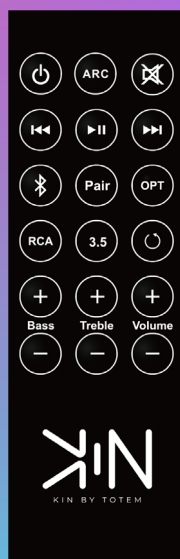


**PLUS MAGNETIC GRILL &  
WALL BRACKET**





# REMOTE CONTROL

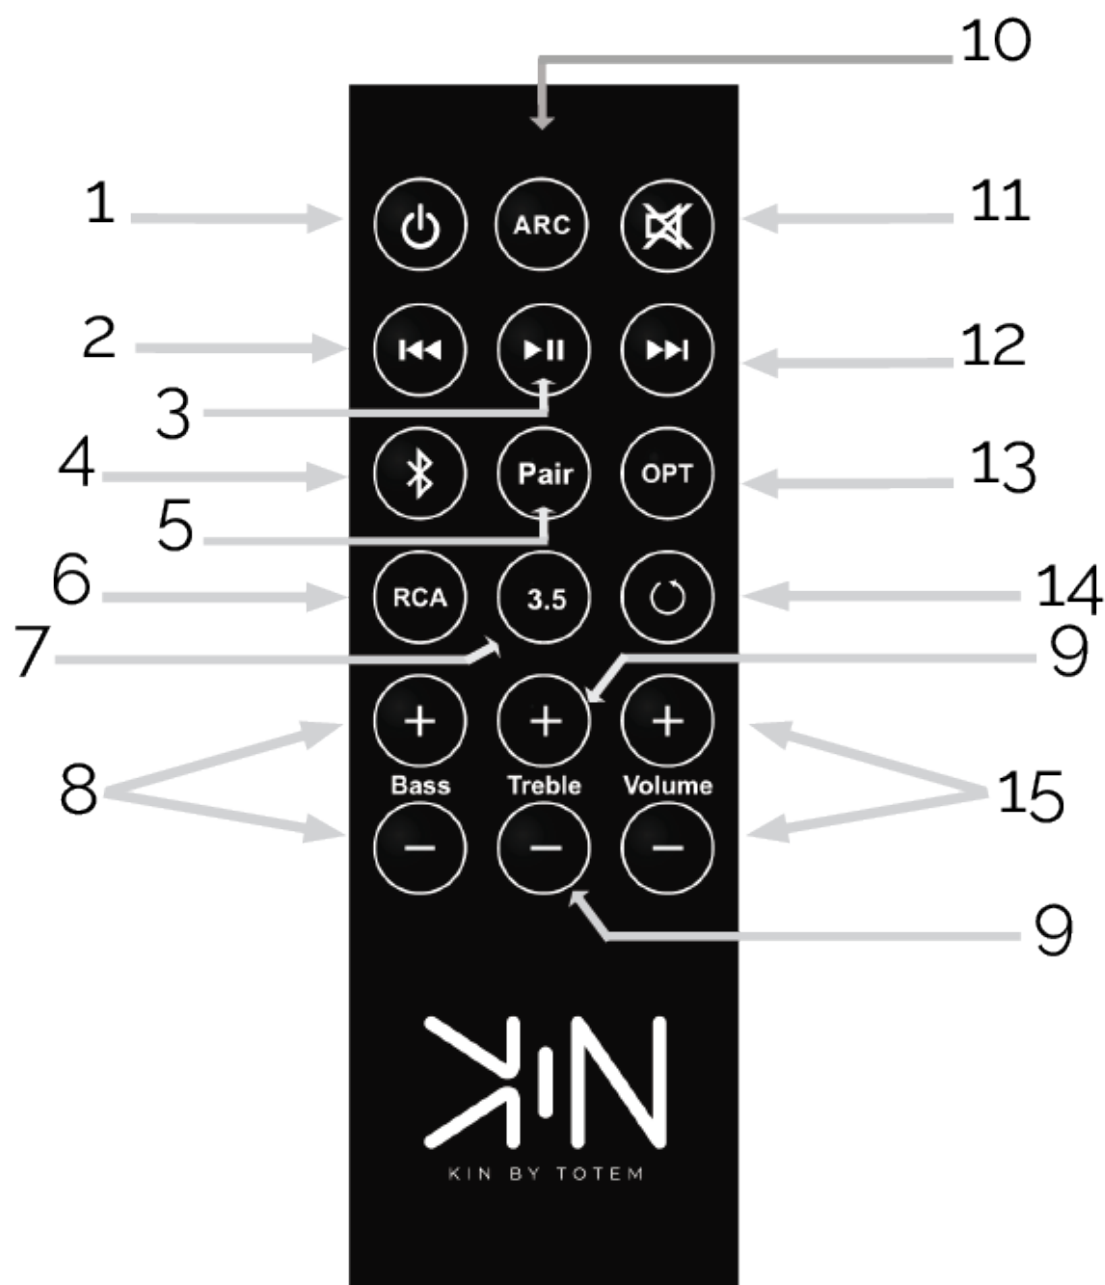 

**Remove the transparent tab located at the bottom of the remote to activate the battery.**



The remote can be easily controlled by LG, Samsung, Sony, Hisense TV (those that comply with the NEC coding format) remotes. HEX codes are available for home automation systems.

#### **FUNCTIONS ARE LISTED BELOW**

 
- 1. Power/Standby**
- 2. Previous Track (Bluetooth operation only)**
- 3. Play/Pause (Bluetooth operation only)**
- 4. Bluetooth Input Select**
- 5. Bluetooth Pairing**
- 6. Aux 1 : RCA Input Select**
- 7. Aux 2: Mini Jack Input Select**
- 8. Raise and lower bass**
- 9. Raise and lower treble**
- 10. ARC Input**
- 11. Mute**
- 12. Next Track (Bluetooth operation only)**
- 13. Optical Input Select**
- 14. EQ: Change the EQ setting with each touch**
- 15. Raise and lower volume**

**The Totem remote uses a CR2025 battery.  
Do not ingest the battery.  
Chemical burn hazard.**

## Display

KIN Play Sound Bar II is equipped with a display that indicates power status, input, volume setting, tone control, pairing, and EQ effect. The display disappears approximately 15 seconds after the last function is engaged. The display also has the subwoofer pairing button integrated into it at the bottom center.

See Subwoofer pairing instructions to use

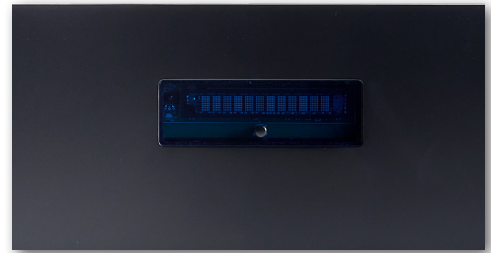

## Volume

Distortion is inevitable when the amplifier is pushed above its rated output level, which may result in speaker damage. This type of damage constitutes abuse and may not be covered by warranty. Be attentive to the instant distortion commences, turning the volume control down to prevent speaker and/or amplifier damage.

## KIN Play Soundbar II - EQ Setting

### **Pure:**

Natural, unequalized sound with a wide and smooth response. This is the sound the artist and Totem intended it to be and can be considered the factory default setting.

### **Concert:**

Flat response with slightly elevated top end and bottom end that creates a live atmosphere.

### **Movies:**

Slightly more dynamic peaks than concert to enhance the theater experience.

### **TV:**

Enhances a wide portion of the midrange to add clarity to voices.

 
### **Night:**

Provides dynamic range and intelligibility at minimal output levels, perfect for moments of listening at low volume.

**Games:** Highs and bass are generously boosted for an improved gaming EXPERIENCE.



# AMPLIFIER CONTROLS and CONNECTIONS

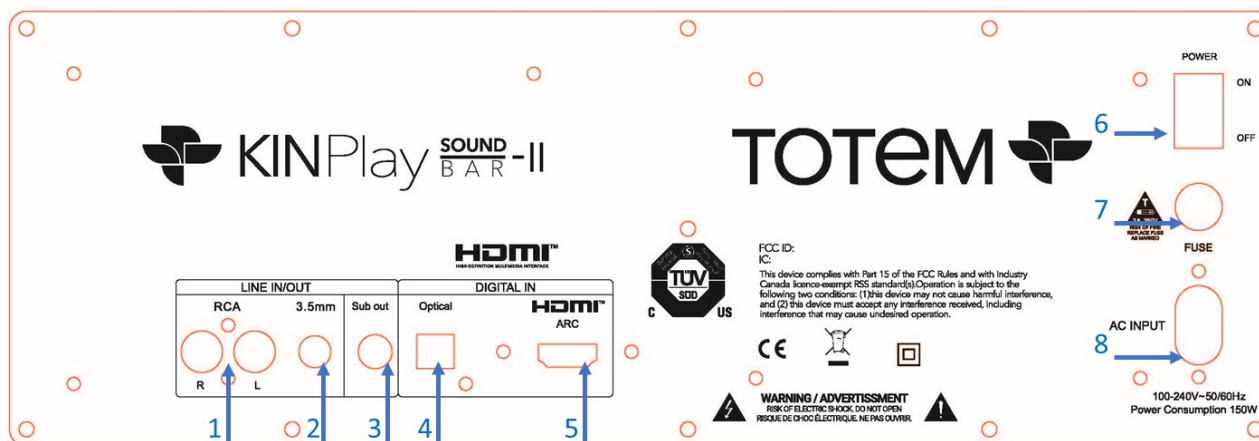

## 1. Aux 1, Stereo RCA Inputs

The stereo analog input can connect to the analog output of your TV, cable box, satellite, game, turntable, or whatever device you'd like to connect.

## 2. Aux 2, Mini jack Input

This 3.5mm input can be used with many portable devices and computers.

## 3. Sub Output

This allows you to connect a powered subwoofer to enhance the bass impact. The KIN SUB 10 can be added wireless, see the **WIRELESS SUBWOOFER PAIRING SECTION**.

## 4. Aux 3, Optical Input

The digital Optical input, sometimes referred to as Toslink or SPDIF, allows the use of an optical wire from your TV, cable box, satellite, game, or whatever source you'd like to connect.

## 5. ARC **HDMI**<sup>TM</sup> HIGH-DEFINITION MULTIMEDIA INTERFACE

This 2-way HDMI connection can be connected to the ARC connection on your TV.

## 6. Main Power

This will turn the AMP on and off. Make sure to make all your connections before turning on the AMP. You only need to turn this switch on once, it will then go into standby mode when it is not in use.

## 7. Fuse Compartment

This provides access to the fuse if it needs to be replaced. Be sure to follow the guidelines and replace it only with a fuse of the exact same specifications

## 8. AC Input

The supplied power cord connects here, plug the other side into a wall receptacle or power bar.

## Top Control Pannels



1. **Power:** Toggles between On and Standby
2. **Input Select:** Change between connected sources
3. **Volume Down**
4. **Volume Up**
5. **Bluetooth Pairing**
6. **EQ:** Change between EQ settings

## Remote Learning

**Volume Up, Volume Down, Input Select and Power features on the Sound Bar can all be programmed to work with LG, Samsung, Sony, and Hisense (those that comply with the NEC coding format) remotes.**

Press and hold the Input Select button on the Sound Bar's top mounted control panel until "Remote Learning" appears in the display. The Sound bar is now ready for controls to be learned from your TV remote.



REMOTE LEARNING

Touch the Volume + button on the Sound Bar. The display will read "Volume Add Key". Push and hold the corresponding button on your



VOLUME ADD KEY

TV remote until the Sound Bar display reads "Success". Repeat the procedure for the Volume Down, Input Select and Power functions.

SUCCESS

## Placement Tabletop or Wall Mounting

Attach the six adhesive backed feet to the bottom corners and center of the cabinet. This will help isolate the KIN Play Soundbar II from the surface to eliminate distortion causing resonance. Position it 6" or more from the rear wall for optimal performance

Use THE provided template to accurately determine the proper location for the 2 wall bracket pieces. The KIN Sound Bar II is far more substantial than most sound bars so be sure to use suitably robust hardware to secure it. Install the 4 included rubber bumpers on the back at the corners to add stability, hold it straight, and prevent transferring resonance to the wall. KIN Play Sound Bar II is also equipped with threaded inserts spaced at 600mm as per VESA standards.



## Bluetooth Pairing


Turn on the KIN Play Sound Bar and select the BLUETOOTH Input designated with the BLUETOOTH logo  on the remote or scroll through the inputs on the top control panel. BLUETOOTH will appear in the display (see FIG 1). Push Pair on the remote or the BLUETOOTH button on the control panel. PAIRING will appear briefly to indicate pairing mode (see FIG 2).

FIG 1


BLUETOOTH

FIG 2

PAIRING


FIG 3

 BLUETOOTH will reappear in the display, as in FIG 1, but will now be blinking. Turn on your BLUETOOTH device, go to the BLUETOOTH settings, and let it find "Totem KIN Play Sound Bar" in your list of devices. Select the KIN Play Sound Bar option and wait for your device to say CONNECTED. (See FIG 3) BLUETOOTH (FIG 1) will stop blinking and stay solid, indicating the pairing has been successful. You are ready to enjoy music wirelessly streamed via BLUETOOTH.

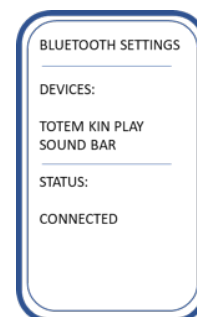


# Connecting a Subwoofer

 **WIRED OPTION:** Connect an RCA cable from the SUB OUT on the KIN Play Sound Bar to the LINE IN on the subwoofer. If the subwoofer has left and right inputs you can connect to either. If one is designated as an LFE, select that input.

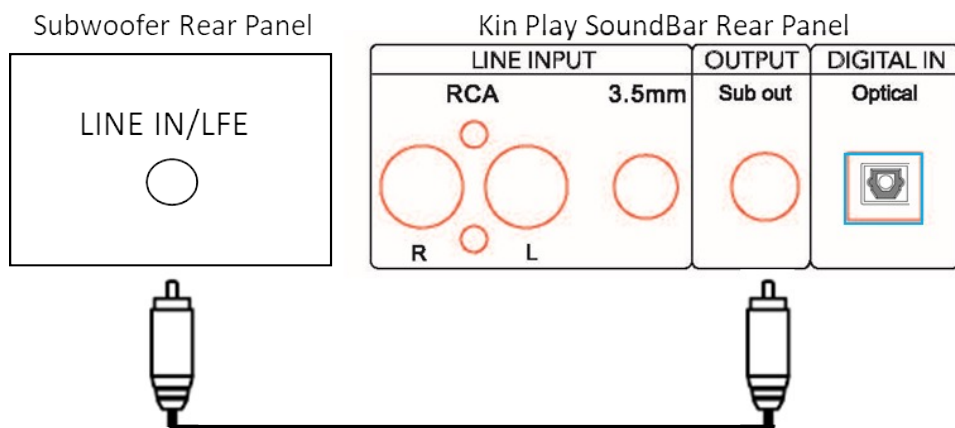

 **WIRELESS OPTION:** The KIN Sub 10 and Tribe Solution Sub can both be paired wirelessly with the KIN Play Soundbar II. Ensure the KIN Play Sound Bar and subwoofer are both on before starting the pairing procedure. The KIN Play Sound Bar's pairing button is located centered at the bottom of its front display. The pairing buttons for both subwoofers is located on their back panels.

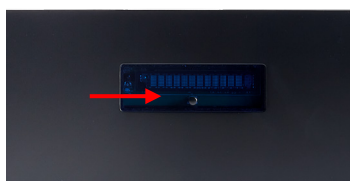


**KIN SUB 10 pairing procedure:** Push the pairing button on the KIN Play Sound Bar. Within 10 seconds, push the pairing button on the KIN SUB 10. The blue LED on the back panel of the sub will flash quickly as it enters pairing mode and will stay a solid blue when pairing is successful.

**Tribe Solution Sub pairing procedure:** Set the subwoofer's POWER MODE is set to WL (Wireless). Push the pairing button on the KIN Play Sound Bar. Within 10 seconds, push the pairing button on the sub. The green LED on the back panel of the sub will flash quickly as it enters pairing mode and will stay a solid green when pairing is successful.


# Connections and SET UP to TV
 
## HDMI ARC from TV to KIN Play Soundbar

II This simple connection in many cases also allows the TV remote to control the volume of the Sound Bar. Connect all sources to the TV, then connect the HDMI ARC from the TV to the HDMI ARC on the Sound Bar.

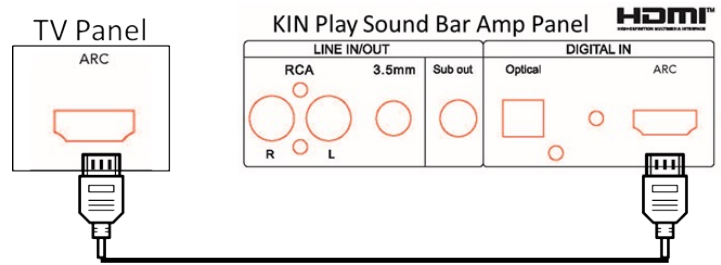


 All TVs, sources, apps, and manufacturers have their own designations and terms for their audio settings. The following instructions may not use the identical terms of your components, but they should be similar and help you get through the setup process.

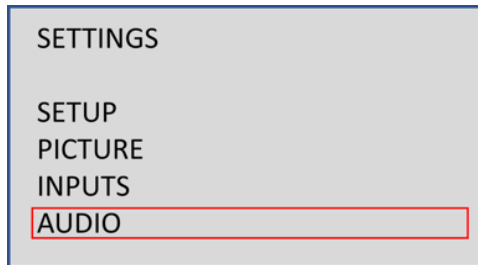


Enter the **SETTINGS** section of your TV (or source or app).

 Find and select the **AUDIO** section.

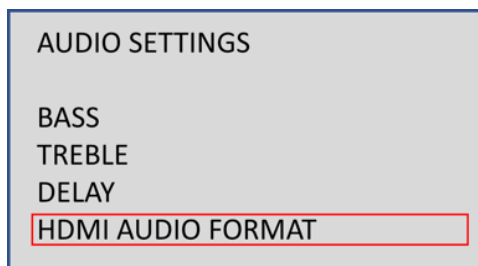

Enter the **AUDIO** section and look for a setting often labeled as **AUDIO OUTPUT**, or something similar.

 Select the **AUDIO FORMAT** option.

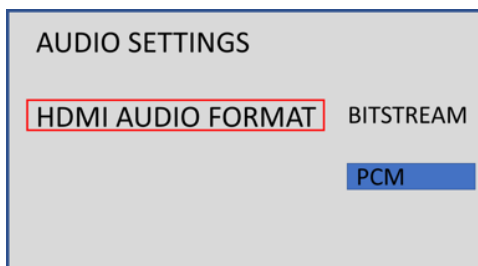

Enter **HDMI AUDIO FORMAT**. It should give you the option of **BITSTREAM** OR **PCM**.

Select the **PCM** option.


The TV/Source/App should be ready to send sound to the KIN Play SoundBar II

**The KIN Play SOUNDBAR II DOES not decode surround effects so your TV, source, or app must be set to PCM output in their respective audio menus. Consult their manuals to ensure this important step is performed properly.**



 
# Optical Audio Input from TV to KIN Play SoundBar II

This Setup option for TVs equipped with an **OPTICAL AUDIO OUTPUT**. All sources such as a cable box, DVD/Blu-Ray, media streamer, etc. are connected directly to the TV. The **OPTICAL AUDIO OUTPUT** from the TV is then connected to the **OPTICAL INPUT** on the KIN Play SoundBar II.

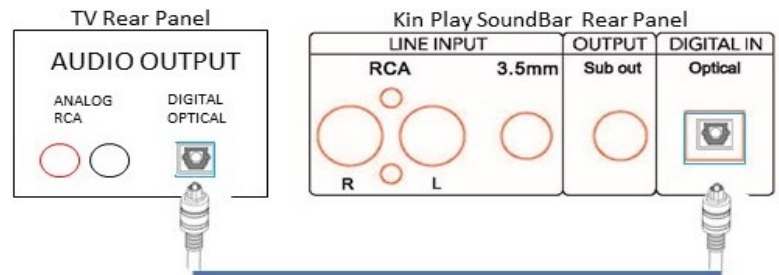


 All TVs, sources, apps, and manufacturers have their own designations and terms for their audio settings. The following instructions may not use the identical terms of your components, but they should be similar and help you get through the setup process.

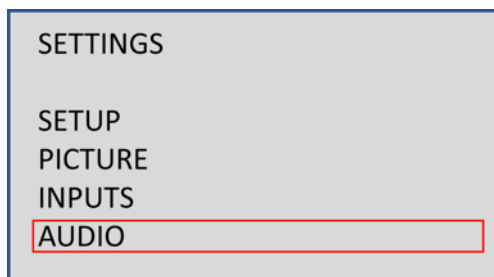


Enter the **SETTINGS** section of your TV  
(or source or app).

 Find and select the **AUDIO** section.

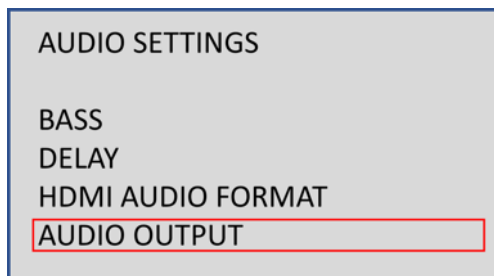

Enter the **AUDIO** section and look for a setting often  
labeled as **AUDIO OUTPUT**, or something similar.

 Select the **AUDIO OUTPUT** option.

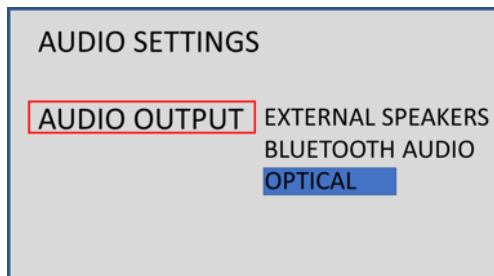

**ENTER THE AUDIO OUTPUT SETTING.**

Select the **OPTICAL** option.

 
The TV/Source should be ready to send sound to the  
KIN Play Soundbar II

The KIN Play **SOUNDBAR II** **DOES** not decode surround effects so your TV, source, or app must be set to **PCM** output in their respective audio menus. Consult their manuals to ensure this important step is performed properly.

# Bluetooth Audio Input from TV to KIN Play SoundBar II


This wireless connection option connects your Bluetooth equipped TV to the KIN Play SoundBar II. Your TV must be equipped with Bluetooth output to use this method. Select the Bluetooth output of the TV, select Bluetooth on the KIN Play Soundbar II, and engage the KIN Play SOUNDBAR's pairing mode. See the Bluetooth pairing instructions in this manual for more detail instructions.

All TVs, sources, apps, and manufacturers have their own designations and terms for their audio settings. The following instructions may not use the identical terms of your components, but they should be similar and help you get through the setup process.

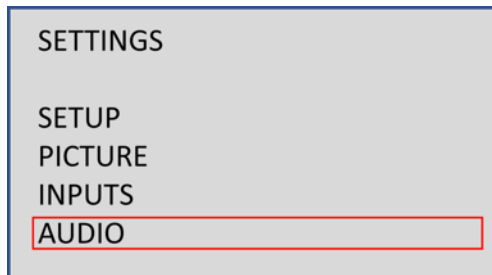


**Enter the **SETTINGS** section of your TV (or source or app).**

 **Find and select the **AUDIO** section.**

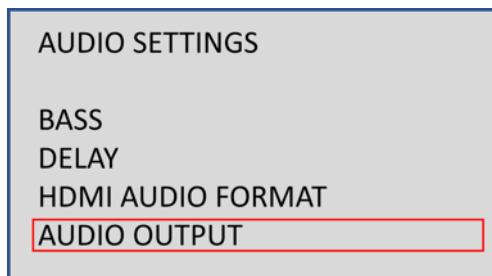

**Enter the **AUDIO** section and look for a setting often labeled as **AUDIO OUTPUT**, or something similar.**

 **Select the **AUDIO OUTPUT** option.**

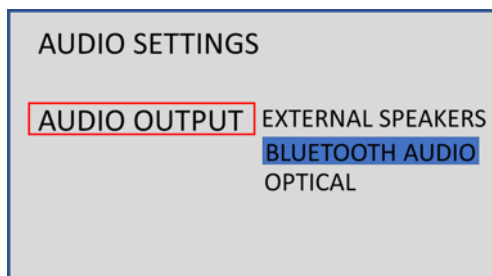

**ENTER THE **AUDIO OUTPUT** SETTING.**

 
**Select the **BLUE TOOTH** option.**

**The TV/Source should be ready to send sound to the KIN Play Soundbar II**

**The KIN Play SOUNDBAR II DOES not decode surround effects so your TV, source, or app must be set to PCM output in their respective audio menus. Consult their manuals to ensure this important step is performed properly.**

## Analog Audio Output from TV to Soundbar


All sources are connected directly to the TV. Connect the KIN Soundbar's RCA (analog) input to the TV's stereo RCA analog output. If the TV has two sets of audio outputs labeled as Fixed and Variable, select Fixed. This will let you turn your TV's speakers down or off while the TV still supplies a constant audio signal to the **SOUNDBAR**.

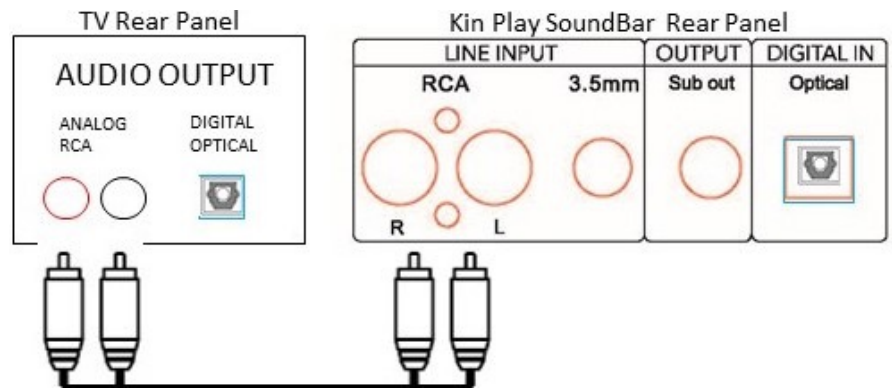

## All Sources Connected directly to Kin Play Soundbar II

**All sources (Blu-ray, Satellite, etc.) can be connected directly to the Soundbar. Using this method, you will need to select the proper video input on your TV to match sound.**

 **If you are not getting any sound, you likely need to set your TV, source, or app to PCM output in their audio menus.**

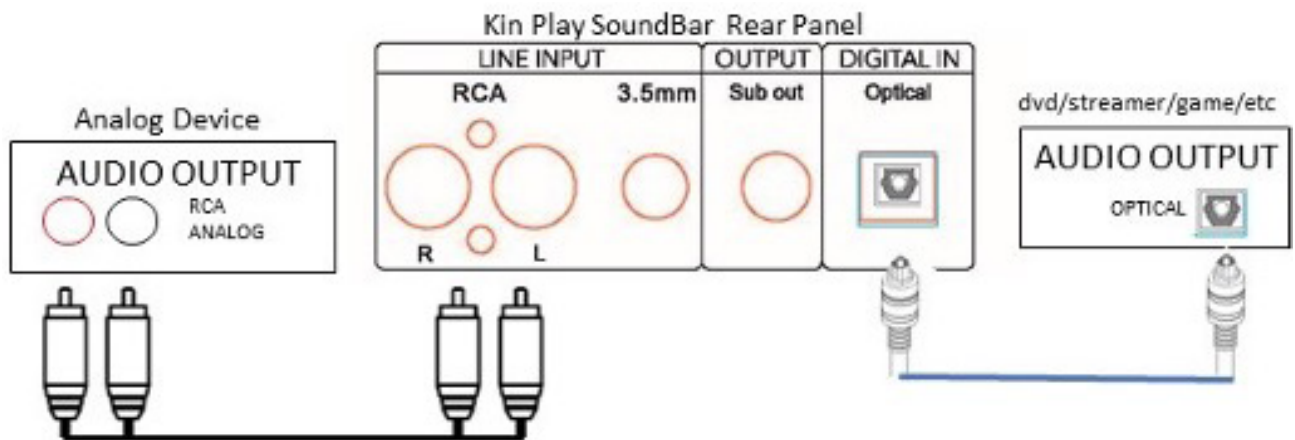

## Standby and AUTO on

When no audio input has been detected for 20 minutes, the KIN Play Sound Bar II will go into Standby mode. If the same audio signal that was playing when it entered standby mode returns, it will wake. KIN Play Sound Bar II can also be “woken” by pressing the standby button on the remote or control panel.

# Troubleshooting

## **No Sound**

- Check to see if the MUTE setting has been engaged.
- Make sure the correct source has been selected.
- Verify that the system is powered up and properly connected.

## **No Power/No light in the LED:**

- Verify the main power switch on the amp has been turned on.
- Verify that the wall AC outlet is functional.
- Check to see the power cord is securely connected.

## **Cannot connect to Bluetooth**

- Ensure the Bluetooth input has been selected, signified by a solid blue light.
- Confirm the speakers are in pairing mode, signified by a flickering blue light.
- On the Bluetooth device, turn the Bluetooth function on and off.
- If the device doesn't find the speakers in pairing mode, turn the speakers off and then on again.

## **Sound from one speaker only**

- Verify the speaker wire is securely attached.
- Check the interconnects of the attached sources.
- Try a different source to see if the issue is common to all sources.

## **Remote Control Issues**

- Check to see if the transparent film separating the battery from the connections has been removed.
- Be sure that you are within range (approximately 30ft). Aim the remote at the active speaker.
- Replace the battery.

## **Low Output**

- Some sources can play louder than others, verify if all sources have the same output.
- Many sources, like phones or tablets, have their own volume controls. Ensure their volumes are set to higher levels.
- See if both speakers are playing.

## **Distortion, Poor Quality**

- Verify the polarity of speaker connections. Incorrect connections can cause a lack of bass or image.
- Bass and treble setting might be mis adjusted, push the reset button on the remote.
- Sources must be set to stereo, not a surround effect like Dolby or DTS.

## **No Sub woofer Output**

- Verify that the wire is securely connected.
- Make sure that the proper input is being used on the sub woofer.
- If the sub woofer is on and properly connected, increase its volume.

# Specifications

**Description • Active SOUNDBAR**

**Frequency Response • 60Hz - 22kHz +- 3dB**

**Tweeter • Customized 1-inch Metal Alloy 2x1"**

**Woofer • Customized Natural Hybrid 4 x 4"**

**High Resolution Internal Dac Provided**

**Amplifier Power • 150w (2 x 75w)**

**Wireless Connectivity • Bluetooth 5.0**

**Analog Inputs • Stereo RCA switchable between Phono and Line Level Mini jack (3.5 mm)**

**Digital Inputs • Optical, BLUETOOTH 5.0, HDMI ARC**

**Outputs • Sub woofer Out 20-220Hz @ ±3dB**

**Dimensions • (WxHxD): 152 x 1200 x115 mm / 5.98 x 47.24 x 4.52"**

**Weight • 38LBS / 17.23 KG**

**Bluetooth Sampling Rate:**

**8kHz, 11.025kHz, 12kHz, 16kHz, 22.05kHz, 24kHz, 32kHz, 44.1kHz,48kHz**

**Optical Insampling Rate: 24bit / 192kHz**

**Decoding:**

**MP2 / MP3, WMA, FLAC(8/16/24bit), AAC/MP4/M4A, WAV(IMA/ADPCM and raw PCM),AIF,AIFC**

**Bluetooth 5.0 aptx HD allows high resolution, simultaneous streaming from one device to two pairs of KIN Play Towers, or a KIN Play Sound Bar. You can choose the same audio to thoroughly fill a house for party mode, or completely different tracks to create distinct sound zones.**

**HDMI ARC: This simple connection in many cases also allows the TV remote to control the volume of the Sound Bar. Connect all sources to the TV, then connect the HDMI ARC from the TV to the HDMI ARC on the Sound Bar.**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Totem Acoustic Inc. is under license.

 
Qualcomm aptX is a product of Qualcomm Technologies International, Ltd. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.



— This appliance is labeled in accordance with European Directive 2002/96/ EC concerning waste electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste.

It should be deposited at an appropriate facility to enable recovery and recycling.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

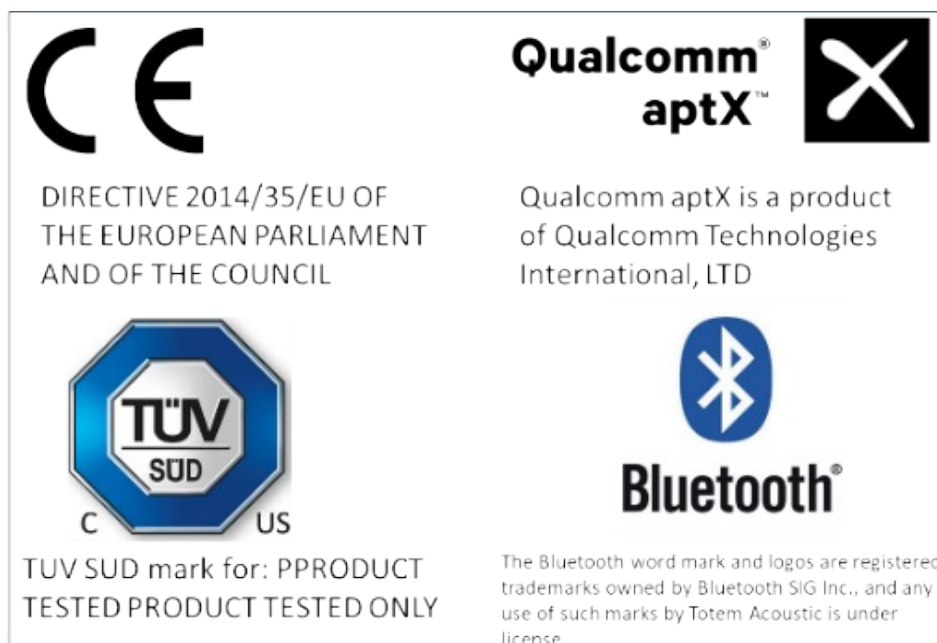

## Product Registration

We very much would appreciate if you took the time to register your product online. Product registration leads to quicker assistance and more efficient support in the rare case that your speaker should have a problem. This can be done quickly and easily in the support section of our site:

<https://kinbytotem.totemacoustic.com/register-your-product/>

## Totem Limited Warranty

Please register online at [www.totemacoustic.com](http://www.totemacoustic.com) within two weeks of the purchase date. The Totem speakers must be purchased from a TOTEM AUTHORIZED DEALER.

Keep your original bill or receipt obtained from your Totem Authorized Dealer.

Retain the sturdy carton and all packing material; all warranty repairs are required to be shipped in their original packaging. This ensures no damage during transportation.

All Totem products are created with the utmost care and quality in mind. If ever a problem should arise, Totem's speakers are covered by a two (2) year limited warranty on the amplifier and 5 years on the drivers, starting from the date of purchase. Remotes are covered for one year. The Totem limited warranty applies to products in normal home use only. The warranty is void if serial numbers have been altered or removed. The warranty is void if products show signs of abuse. The warranty is void if the speakers have been tampered with.

Totem KIN Play Soundbar II require 75-100 hours of actual music playing time as a minimal break-in period. During this time, refrain from playing them at very loud levels. You will notice a definite gradual improvement in the cohesiveness of the music reproduction as this occurs.

We reserve the right to any future change or modification without notice. For further assistance, contact your TOTEM AUTHORIZED DEALER or visit the Warranty section of the Totem website at <https://kinbytotem.totemacoustic.com/support/warranty/>

